


Ultrasonic Aroma Diffuser - User Manual

The following user manual applies to diffuser models with different decorative lampshade designs. Additional functions (interval, light sequences) may vary depending on the model.

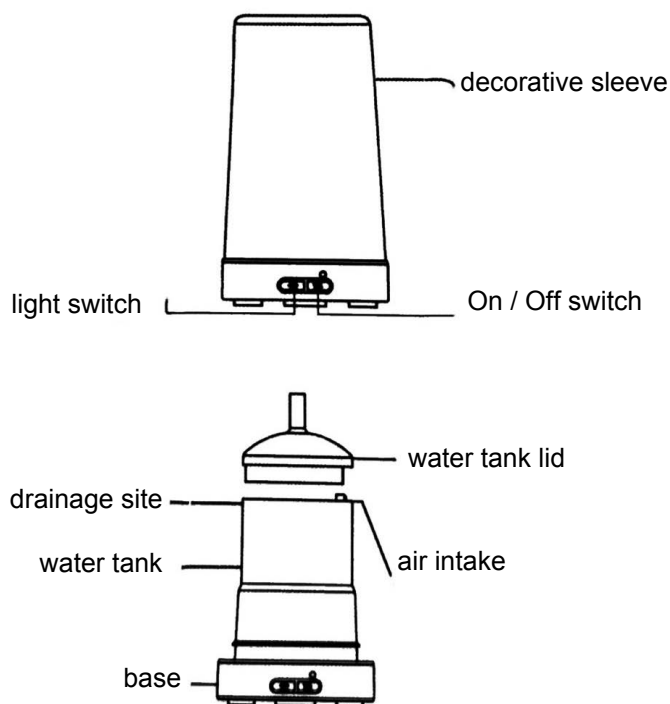

Usage

1. Make sure the aroma diffuser is in an upright position. While holding the base, carefully remove the decorative cover.
2. Connect the included cable to the DC Jack on the bottom of the base of the device.
3. Use the included measuring cup to add water to the water tank. Fill the tank to the MAX line. Do not use hot water. Never add water while the device is on.
4. Add about 3-5 drops of your favorite essential oil to the water-filled tank.
5. Place the water tank lid on the water tank after filling the tank with water and your chosen essential oil. Make sure the lid is positioned correctly with respect to the air inlet and drain side. Place the decorative cover back on the device.
6. Plug the diffuser into the power supply. The diffuser will make two short beeps and will be in standby mode.
7. Press the ON button. The green light will come on. Press the button again to activate the interval mode. The red light will turn on. The interval setting will cause the diffuser to turn on and off intermittently, which will cause the fragrance to spread less often. Press the button again to turn the device off. No lights will be on. The device will also turn off automatically when the water tank runs out.
8. The button on the left turns on the light and allows you to control the colors of its display (depending on the model). The sequence is rainbow colors, then solid colors in intense and soft versions, white and OFF.
9. To disconnect the device, press the right button to OFF mode. Unplug the cable from the power supply. Do not pull the cable from the device side.

Usage - maintenance

After using the aroma diffuser about 6 times or for 3-5 days, the device should be cleaned.

1. Unplug the device and remove the outer cover.
2. Remove any remaining water from the drain side of the water tank. To avoid damaging the product, do not pour water through the air inlet.
3. It is recommended to wipe the water tank with a paper towel after each use to avoid any residual oil remaining in the device.
4. If any dirt is noticed in the air inlet, remove the water tank cover and rinse under running water. Wipe dry with a clean, soft cloth.
5. Never use aggressive cleaning agents or detergents to clean the device, as this may damage the device or discolour it.
6. Never touch the ultrasonic plate.

Attention

When not in use, unplug the aroma diffuser and remove any remaining water from the device. Store in a safe, dry place. The diffuser will automatically turn off when the water tank runs out. The device will not operate without water in the tank.

The amount and intensity of mist produced by the device may vary and should not be considered a defect. Factors that cause variations include water type, humidity, temperature, and air currents.

It is recommended to clean the aroma diffuser every time the oil is changed. Oils can corrode and build up over time, clogging parts of the device. Store the diffuser in a cool, dark place with the lid tightly closed and always out of reach of children and pets. Only use water-soluble essential oils, other oils may damage the device.